

USER GUIDE

LCD Display

Dual Slot Camera Battery Charger

Thank you for purchasing our product. For optimum performance and safety. Please read this instruction carefully before operating the product. Please keep this manual for Future Reference.

Specification:

Charger Type : 4.2V

Applicable Battery: For 3.6v-3.85v Li-ion Camera Battery

Input : DC 5V/1-2A

Output : DC 4.2V/600mA(x1)
DC 4.2V/600mA(x2)

Charger Type : 8.4V

Applicable Battery: For 7.0v-7.4v Li-ion Camera Battery

Input : DC 5V/2A

 
Output : DC 8.4V/600mA(x1)
DC 8.4V/600mA(x2)

Dimension : 120x68x19mm


How To Use

【Note】 : Please use the 2A output AC/USB Adapter if you want to charge 2 batteries simultaneously.

• Use the Extra Charging Cable

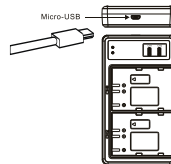


 Step 1
insert the Micro-USB Male connector of the included charging cable into the Micro-USB female port on the charger.

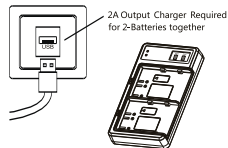

Step 2
insert the USB A Male connector into a USB Wall Charger or Car Charger, other standard USB charger (Such as power bank with 2A output)

 Charger will finish self-checking after you connect this charger to power source, please wait for 3 seconds before you insert the battery into the charger

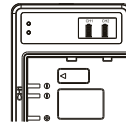

When the charger is powered, you can install the battery into the slot. Battery in socket CH1, CH1 will light on. Battery in CH2, CH2 will light on.

Charging Indicator

Indicator	Power Ratio	Statements
	No Power	No Power
	6%-25%	One Led
	26%-50%	Two Led
	51%-75%	Three Led
	76%-100%	Four Led

Caution:

1. To avoid the risk of fire and/or electric shock, the charger must be stored in cool and dry place
2. Don't charge unmatch battery, otherwise will cause damage or explode.
3. Avoid dropping or placing heavy object on it.
4. Unplug the charger when not in use.
5. Do not disassemble the charger.

Customer Service

- 18 Months Limited Warranty

Warning

- Never disassemble, puncture, shock, crash, short and/or put the unit into a fire.

Thank you for purchasing our product.