


→ 120.00 mm →

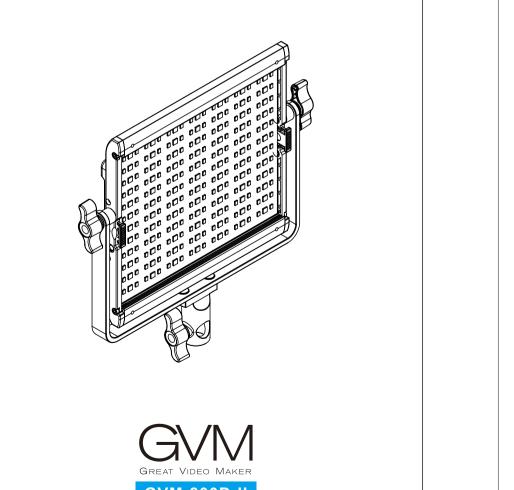

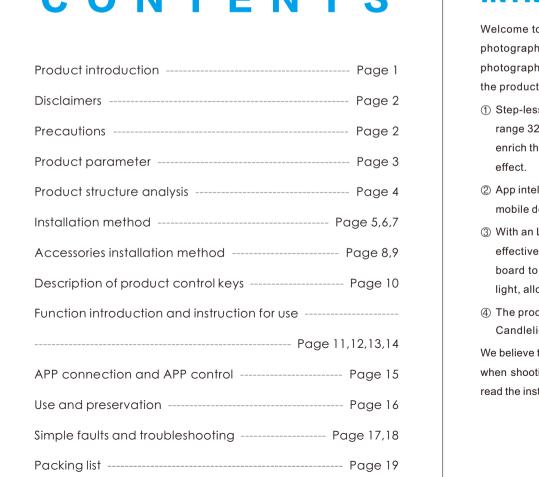

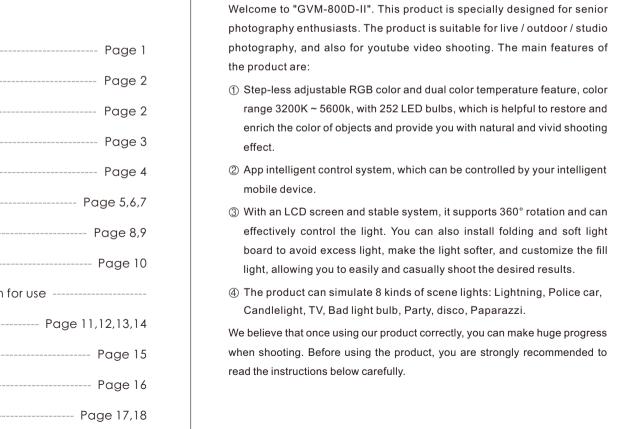



use the product correctly. If you don't obey the instructions and warnings, you maybe cause harm to yourself and the people around, or even damage the

Once you use this product, you are deemed to have read the disclaimer and warning carefully, understand and acknowledge all the terms and contents of this statement, and promise to take full responsibility for the use of this product and possible
 Product model: GVM-800D-II
 Product material: Aluminum alloy
 Lamp beads quantity: 252

from falling and damage.

Battery Capacity: 7.4V-4400mAh*2 (to be purchased separately)

Product Weight: 1KGProduct Size (mm): 270*263*40


Hue: RGB 0°~360°
SAT: 0%~100%
Brightness: 5000lux/0.5m, 1500lux/1m
Light adjustment method: Step-less adjustment
Light angle of lamp bead: 120°

Power supply mode : DC input&Battery

Power supply: DC15V/3A


Features / Features : RGB, SAT, APP, Joint control, Special light,

Cooling: Natural heat dissipationCommodity origin: China. Huizhou

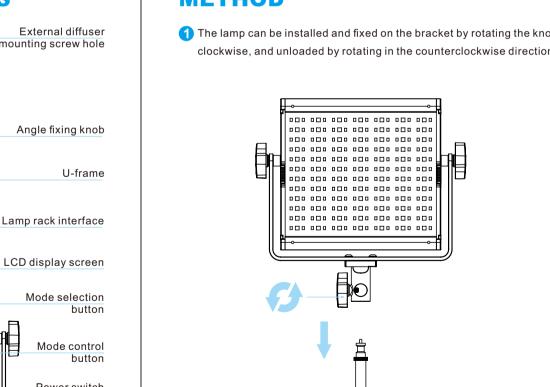

the angle of the panel you need, and then tighten the adjustment knobs on both sides of the U-bracket.

Light control folding can control the Angle of ligh

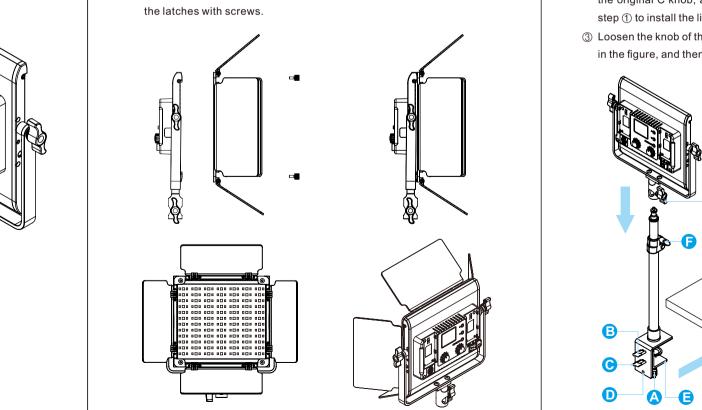

the lamp holder to the desktop, and then tighten the A knob to fix the lamp $\ensuremath{{\mathbb Z}}$ If the desktop is thick, you only need to loosen the B knob and C knob to remove it, after adjusting E down, then install the B knob to the position of the original C knob, and install the C knob to D. At this time, proceed to step ① to install the light stand on a thicker desk. 4 Loosen the F knob to adjust the height of the lamp holder and tighten the F knob to lock the height of the lamp holder. 1 DC15V power input interface 3 Mode control button: Change mode control 4 Change channel button: When is in master/slave mode, press this but o select the channel. 5 Brightness adjustment button: Adjust the brightness 6 Multifunctional button: Press once to switch light mode. Press for seconds to enter/exit the scene mode; Spin the knob to adjust the scene mode. parameters of the current light mode.

7 LCD screen: The screen display the current brightness, control mode, light mode, light parameters, scene number, channel numerical, and

The screen display the current brightness, control mode, light mode, light parameters, scene number, channel numerical, and battery power of the light.

Press the mode button to change the control mode, such a

HUE: Adjustable light color, range 0°~360°

SAT: adjustable light color saturation, range 0%~100% SC: The product can simulate 8 kinds of scene lights: ①Lightning, ②Police

car, ③Candlelight, ④TV, ⑤Bad light bulb, ⑥Party, ⑦Disco, ⑧Paparaz

• In Master mode / Rotate mode, turn the brightness adjustment knob to

Rotate, slave, master, APP

Slave mode: The channel can only be adjusted through the ▲ and ▼ buttons of the controller behind the light. When the channels of the slave

and the master are the same, they can be synchronously controlled by

6 Adjust SAT: range 0%~100%

mposite knob to enter/exit scene light (SC) mode. At this time,

s scene No. ⑤, turn the compound knob to adjust the color tempera

• In Master mode/Slave mode, tap the plus/minus key to set the channel value

Switch the photography light to the APP mode, connect the Bluetooth of the camera light through the mobile phone, and then use the APP to control the

brightness, color temperature, hue, sat, scene, channel, and on/off of

when the current scene is scene No. ⑥ or ⑦, turn the compound kno

rotating the brightness adjustment knob; the current sco

adjust the time. (Other scenes can only adjust the brightness).

mode, and set the same channel. When the APP mode machine con-In Master mode/Rotate mode, long press for 3 seconds and press

application software on the phone (The phone needs to turn on bluetooth and $% \left(1\right) =\left(1\right) \left(1$

d "BT_LED" and connect ightarrow Wait for connection ightarrow After connec



Prepare two or more photography lights, set one to Master mode, and the

• Prepare two or more photography lights, set one to APP mode, and

others to Slave mode, and set the channel (CH) of the master and

When the master and slave channels are the same, the slave of the sa^{\prime}



ones, in order to maximize the performance.



In RGB mode, the lamp beads SAT value is too low or 0; the color. Check whether the color purity SAT value is too low or 0; the color purity value is 100, the color.

Power cord 1 2 3 2 Diffuser 1 2 3 2 Folding 1 2 3 2

Desktop Light Stand 2

Light stand 2 3 Carrying Case 1 1 1 1

Instructions 1 1 1 1