

120.00 mm

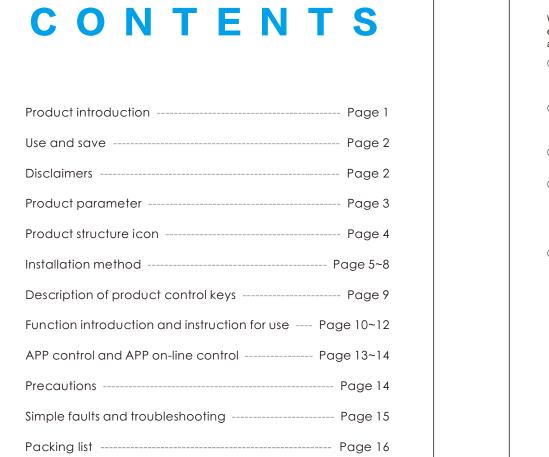

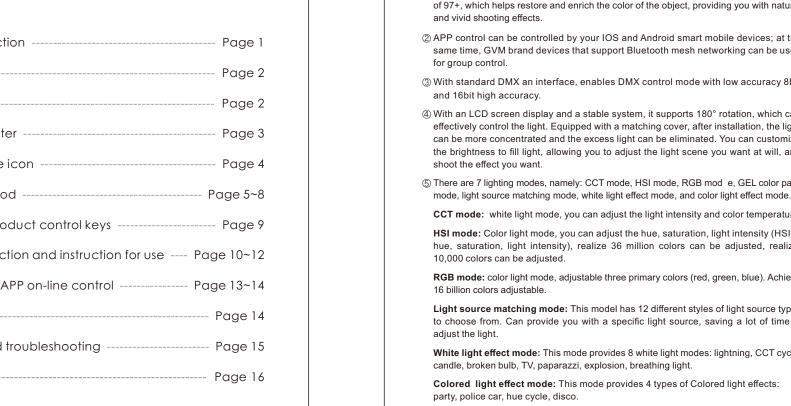

# Product introduction -----Use and save ----- Page 2 Product parameter ----- Page 3 Product structure icon ------ Page 4 Description of product control keys ----- Page 9



also for YouTube video shooting. The main features of the product are:

Clean: Please unplug the power plug before cleaning. And use a damp cloth

Power supply: Ensure that the power supply is within the scope of use, too

and lose the right of maintenance. In the event of a malfunction, please feel

Before using this product, please read the instructions carefully and make sure to

sunlight, high temperature environment. If the product is not to be used for a

free to contact us, and we will do our best to solve the problem.

**HSI mode:** Color light mode, you can adjust the hue, saturation, light intensity (HSI = hue, saturation, light intensity), realize 36 million colors can be adjusted, realize 10,000 colors can be adjusted.

With an LCD screen display and a stable system, it supports 180° rotation, which effectively control the light. Equipped with a matching cover, after installation, the light can be more concentrated and the excess light can be eliminated. You can customit the brightness to fill light, allowing you to adjust the light scene you want at will, ar shoot the effect you want.

**Maintenance:** If there is a malfunction or performance degradation, please do not open the shell package by yourself, so as not to damage the machine

**CCT mode:** white light mode, you can adjust the light intensity and color temperature.

Voltage : AC100-240V

Cooling : Forced cooling by fan 2. Once you use this product, you are deemed to have read the disclaimer and warni carefully, understand and acknowledge all the terms and contents of this statement,

We firmly believe that the correct use of this product will be of great help to your shooting work. It is strongly recommended that you read the following user guide carefully before using the product.

Function / Feature : LCD screen, DMX. Multi-scene mod

Warranty: Do not modify the product, otherwise the right to repair will be lost

Product material : Aluminum alloy + plastic Commodity origin : Huizhou, China

Lock handle

Lamp beads quantity: 1365 lamp beads

Color temperature : 2700K~7500K

Power supply mode : AC input & battery/DC power su

3. Design and specifications are subject to change without notice.


Lumen: 21000lux/0.5m, 5700lux/1m

Product Size (mm): 490\*460\*160 Light adjustment method : Stepless adjustment


Product Weight: 8.6 KG Power: 250W

and promise to take full responsibility for the use of this product and possible

Fixture knob ——

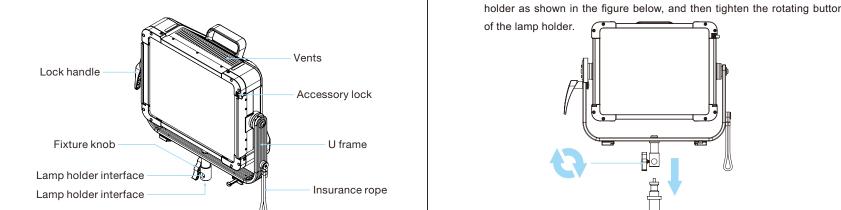


DC input interface

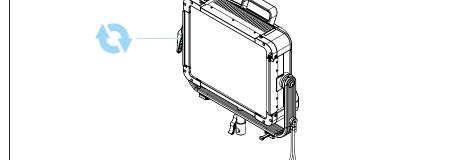

### **INSTALLATION METHOD** 3 Connect the AC power cord for power supply.

1 Loosen the rotating button of the lamp holder, install the lamp on the lan

The installation steps of light-controlled folding are as shown in the figure below. Connect the DC power cord for power supply. (DC power cord needs to be purchased separately) (The light-controlled folding page needs to be purchased separately)

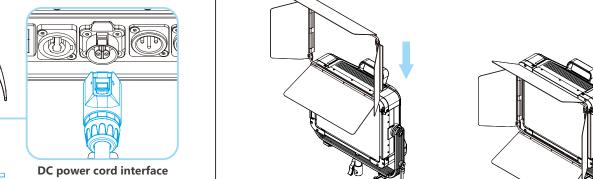

5 Install the two V button batteries on the U-shaped frame, and then connect

the battery and the light through the battery cable to supply power

# (V button battery needs to be purchased separately) (The honeycomb board needs to be purchased separately)

f 1 Knob f 1: INT/SELECTOR/R, a multi-function coding knob, you can adjus "select" or "brightness/red" by pressing or rotating. 8 The installation steps of the soft box are shown in the figure b Knob ②: CCT/HUE/G, multi-function coding knob, can be ac "color temperature/hue/green".

7 The installation steps of the honeycomb board are as shown in the fig



## 6 Menu button: word button to enter the setting men

Return button: press this button to return to the previous menu

8 Power ON/OFF button / cooling button: When the light is off, long press to turn on the light; when the light is on, long press to turn off the light, and start the large air volume to dissipate until the temperature drops to a to adjust the brightness, and turn the [rotary button 2] to adjust the color temperature. Turn the [knob 3] to adjust the green/magenta shift of the white

FAN MODE: Select cooling fan mode, [Auto/Quiet/High]

DISPLAY SETUP: Set display backlight [Brightness (0~10)] and backli

Press the MENU button to enter the menu setting page  $\rightarrow$  turn the [knob①] to select an item  $\rightarrow$  press [Knob①] Enter the project setting interface  $\rightarrow$  Set the parameters of the project by pressing or turning [Knob①]  $\rightarrow$  Press [BACK] to go to the previous menu

DMX SETUP: Set DMX parameters, [address (001-512)] and mode [(8bit/16b Two types of colored papers, ROSCO and LEE, are provided. Each of the tv colored papers has 30 colors. Different colors of colored paper can be selected HT FREQUENCY: Set dimming frequency, adjustment range [15KHz-25I

press the [rotary button 1] to enter the menu selection → turn the [rotary button ①] to select the [Rosco]

menu or the [LEE] menu  $\rightarrow$  press the [knob ①] to enter the selected menu  $\rightarrow$  turn [Rotary button ①] Select the color in the menu  $\rightarrow$  press the rotary button ①'to enter FACTORY RESET: Select [YES/NO] to restore factory setting

To achieve the desired light effect by adjusting the ratio of red/green/blu Press [MODE key] to switch to [RGB] mode  $\rightarrow$  press [Knob1] to switch [INT] adjustment / [RGB] adjustment.

[rotary button (1)] to adjust the brightness.

When adjusting [RGB], turn the [Rotary button 1] to adjust the parameters of [R], the [Rotary button 2] to to adjust the parameters of [B].

Press [MODE key] to switch to [HSI] mode  $\rightarrow$  turn [knob ①] to adjust brightness, turn [knob ②] to adjust hue,

mode  $\rightarrow$  press [rotation button ①] to enter the men ightarrow rotate [rotation button 1] to select the light typ  $\rightarrow$  press [rotation button ①] to enter this type of

### [rotation button ①] to enter this type of adjustment [rotation button ②] To adjust the color temperature

### turn the [rotary button $\ensuremath{\mathfrak{I}}$ ] to adjust the frequency.

ightarrow Rotate [Rotary button ①] Select the light type ightarrow press [Rotate button ①] to enter this type of

Adjustment → Turn [Rotary button ①] to adjust the

data functions of your mobile phone, and the Bluetooth of the lighting device; Color effect mode, 4 optional color light effects.

device that needs to be connected for network

connection. (figure 2) \*The Android system needs to enable locatio permission to use Mesh technology to to the device. During this process, we will

collect any of your location information.

iOS version: App Store

There may be a delay in sending the v code, and the delivery speed depends E-mail server you are using; turn [rotation button 1] to select light type  $\rightarrow$  press ode Mail as advertising. Please check y

) On the "My Devices" page, click the "Add Dev button, search for nearby Bluetooth lighti devices that have been turned on, and select

① After successfully adding your ② Click the device bar to enter the

product from being damaged by falling;

The product is not anti-corrosion, do not let the product come into contact with any

n-original power adapters with different output voltage parameters to light up the

lighting equipment, your

the "My Equipment" list;

equipment will be displayed in

(5) When the product is not used for a long time, please turn off the power of the product to save energy consumption.

The device in the APP cannot be clicked to enter the control enter the device is online (displays a small green dot); if it is offline, follow the steps for network connection failure to check.

Restart the device, wait for 5 seconds, and it can be controlled when it is displayed as online; reset the device's Bluetooth, and add the device to the device list again.

rs to add a Check whether the device is vice, the normally turned on and whether

Bluetooth of the it has been bound by another device cannot person's connection.

Need to be purchased separately

Check whether the device is turned on normally and whether onnect to the network configuration of the device.

Check whether the device is turned on normally and whether it has been bound by another person's connection; check whether the Bluetooth and networkconditions of the mobile phone are good.

Check whether the device is turned on normally and whether it has been bound by another After resetting the device's Bluetooth and restarting the App, try to connect again.

he device cannot be when the device is offline or when the network condition is not good.

Whether to remove the device when the device is offline or when the network condition is not good.

After resetting the device's Bluetooth, search and add the device again.

Make sure the adapter is well contacted with the power plug.

Or does
'up

When using a lithium battery
to supply power, make sure
that the battery does not
have "low battery" protection.