


# ◄ 120.00 mm →

GREAT VIDEO MAKER

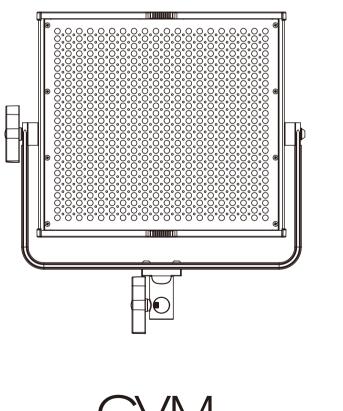

nail: amazonsupport@gvmled.com e Add: 4301 N Delaware ave, unit D. PHILADELPHIA, P





# CONTENTS

Product introduction	Page
Disclaimers	Page
Precautions	Page
Product details GVM-520S	Page
Product details GVM-672S	Page
Product structure analysis	Page
Installation method	Page 6,7,
Installation of barn doors and external diffuser	
	Page 9,1
Description of product control keys	Page 1
Function introduction and instruction for use	- Page 12~1
Use and preservation	Page 1
Troubleshooting	Page 1
Packing list	Page 1

Welcome to "GVM-520S / GVM-672S". This product is specially designed senior photography enthusiasts. The product is suitable for live / outdoor studio photography, and also for youtube video shooting. The main features of the product are:

- Two-color temperature characteristic with stepless adjustment, color range 3200K ~ 5600k, with hundreds of closely arranged LED bulbs, helps to restore and enrich the color of objects, providing you with natural and vivid shooting effect
- ② LCD screen display and stable system, which can support 360° rotation and effectively control the light Line. You can also install folding an external soft light board to avoid redundant light and make the light softer You can customize the control of fill light, so that you can easily shoot the desired results.

We believe that once using our product correctly, you can make huge progress when shooting. Before using the product, you are strongly recommended read the instructions below carefully.

- from falling and damage.

**1.** Before using this product, please read the instructions carefully and make sure use the product correctly. If you don't obey the instructions and warnings, you maybe cause harm to yourself and the people around, or even damage the product and other things around.

Once you use this product, you are deemed to have read the disclaimer and wa carefully, understand and acknowledge all the terms and contents of this statement, and promise to take full responsibility for the use of this product and possible

Please use the matching power adapter or lithium battery with the sa specification to power the product. Do not use power adapter with different output voltage parameters.

) The product is not waterproof, please use it in rainproof environmen ③ The product is not anti-corrosion, therefore do not let the product to any corrosive liquid.

④ When using the product, make sure the product is put firmly and preve

(5) If the product will not be used for a long time, please switch off the pow to reduce energy loss.

# **GVM-520S**

Brand : GVM Name : Photography light Type : Photography fill light Number: GVM-520S Number of light beads : 528 ♦ Color-rendering Index : ≥97 Color Temperature : 3200K---5600K Luminance : 18500lux/0.5m, 4200lux/1m Light Adjustment Method : Stepless adjustment Light angle of lamp bead : 45° Function / Characteristics : High color rendering index light be Joint control Power: 30W Power Supply Mode : DC input & Battery Voltage : AC:100-240V Power specification : DC15V/3A Battery Capacity: 7.4V-4400mAh\*2 (to be purchased separately) Weight: 1.87KG Size (mm): 310x320x55 Material : Aluminum alloy Heat Dissipation : Natural way 🔷 Origin : Huizhou, China

## **PRODUCT DETAIL GVM-672S**

Brand : GVM
Name : Photography light
Type : Photography fill light

Number: GVM-672S

Number of light beads : 672

♦ Color-rendering Index : ≥97

Color Temperature : 3200K---5600K

Luminance : 20000lux/0.5m, 4600lux/1m

Light Adjustment Method : Stepless adjustment

lacellines Light angle of lamp bead : 45 $^\circ$ 

Function / Characteristics : High color rendering index light bead Joint control

Power: 40W

Power Supply Mode : DC input & Battery

Voltage : AC:100-240V

Power specification : DC15V/3A

Battery Capacity: 7.4V-4400mAh\*2 (to be purchased separately

Weight: 1.9KG


♦ Size(mm): 310x320x55


Material : Aluminum alloy

Heat Dissipation : Natural way


🔷 Origin : Huizhou, China




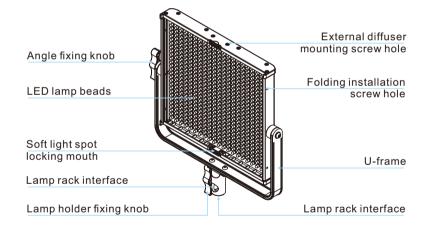

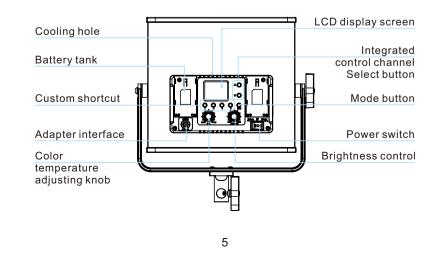

1 The lamp can be installed and fixed on the bracket by rotating the knob clockwise, and unloaded by rotating in the counterclockwise direction.

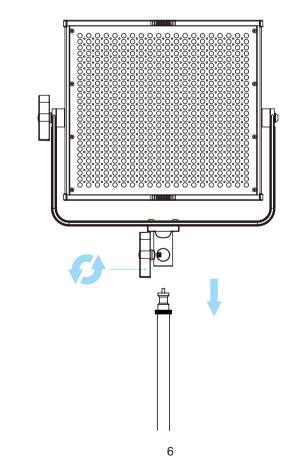

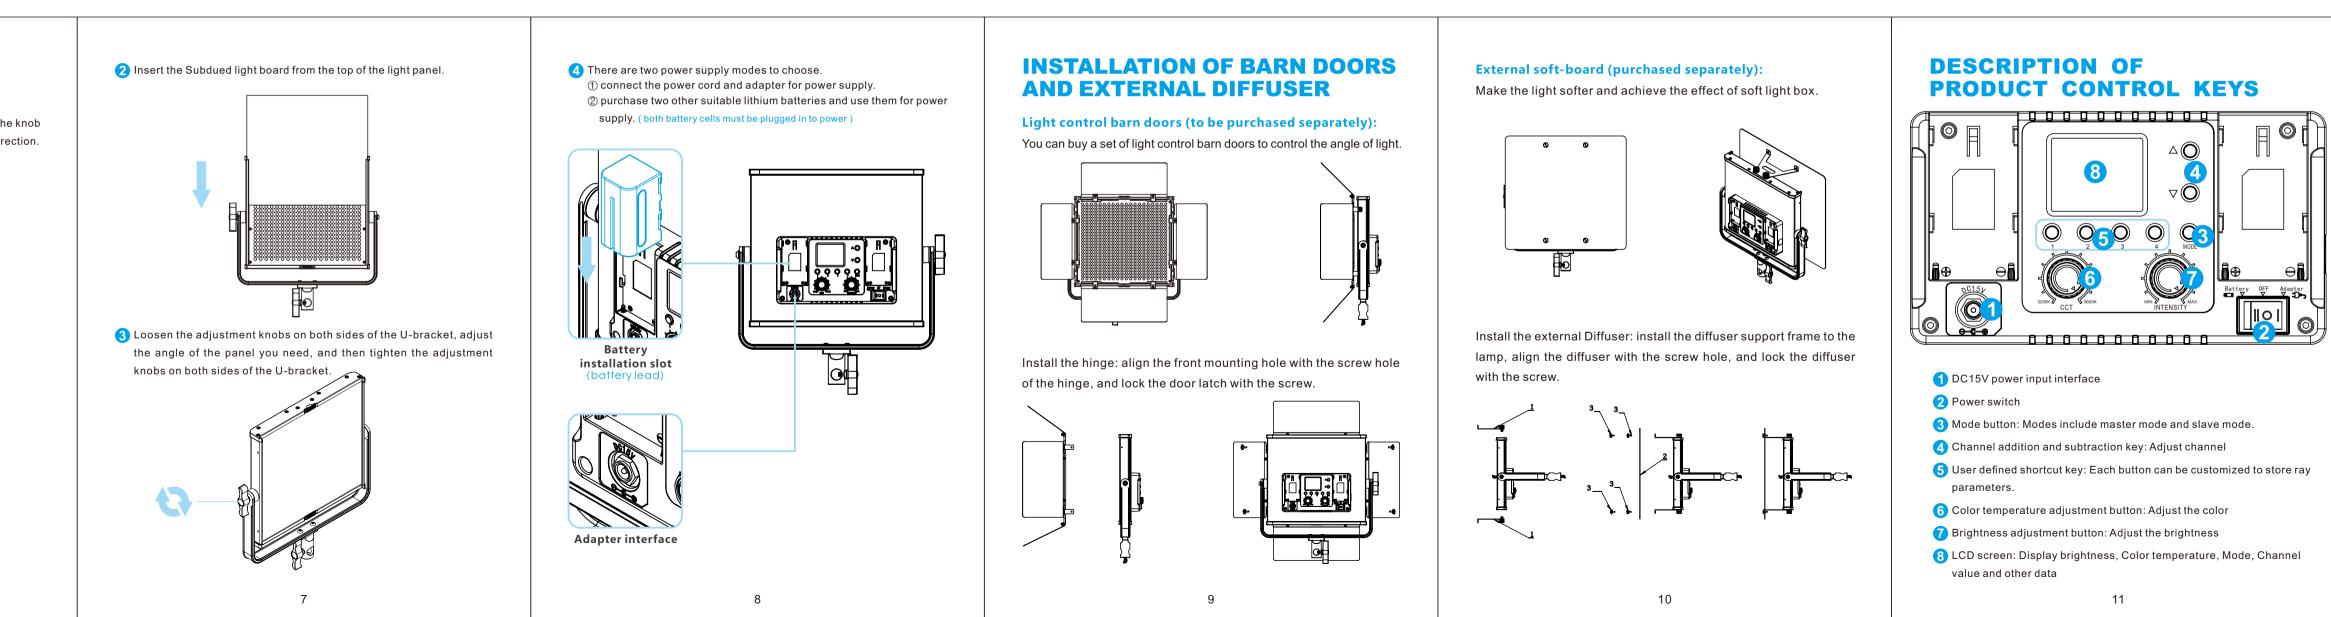

# FUNCTION INSTRUCTION INSTRUCTION FOR USE

### Node selection :

Slight press the mode button to shift mode, the mode includes Master, Slave.

MODE Master: Brightness, color temperature, and channel can be adjusted, and the brightness and color temperature of the same chann slave can also be adjusted simultaneously; brightness, color temperature.

MODE Slave : It can only adjust aisle; master mode and slave mode can only be synchronously controlled by master mode under the condition that they are under the same aisle.

## **2 Adjust CH:** range 0~11

Set channel value using channel addition and subtraction key.

## 3 Adjust brightness (BRG): range 10%~100% In the master mode, adjust lightness through the knob

 Adjust color temperature (CCT): range 3200K~5600K In the master mode, adjust color temperature through the knot

## ⑤ Custom shortcuts :

1, 2, 3, 4 four custom shortcuts can store four brightness and color temperature data. In Rotate mode, adjust the brightness and colo temperature to the parameters you need to store, then press and hold it One custom shortcut in 3 seconds, "Collectde!" appears at the bottom of the screen to storesuccess. When the same button stores a new

parameter, the parameter stored last time of this button is automatically deleted.

### (6) Multiple Units Controls (between photography lights)

Prepare two or more photography lights, set on as master mode and the other slave mode, and set a same channel value, in this way, it is able to control the lightness and color temperature of slave machine through adjusting the knob of the master machine. Moreover, it is also able to connect the master machine.

Do not put the product in a highly humid, strong electromagnetic field, direct sunlight, high-temperature environment. If not use the product for a long time, disconnect the power and take out the battery.

Clean : Before clean, disconnect the power plug. And use wet cloth rather than any detergent or soluble liquid, avoiding damaging the surface layer.

Power : Make sure the power is in the demanded range, not too high or too low. Correctly load the battery, in order not the damage to machine.

Repairing : If there is fault or performance degradation, do not unpack the shell by yourself, avoiding damage the machine and lose the right of maintenance. When there is a fault, do not hesitate to contact us, and we will do our best to deal with the problem

ccessories : Please use the accessories provided by manufacturer and approved ones, in order to maximize the performance.

**Guarantee :** Do does not modify the product, or you will lose the right of maintenance.

# **OUBLESHOOTING**

	Phenomenon	Check the product	Troubleshooting
	The switch indicator does not light up	① Check the matching power adapter indicator light up or not.	Make sure the adapter is well contacted with the power plug.
		② When using lithium battery, make sure there's no "low power" protection.	Charge the battery before using it.
	The knob of lightness and color temperature are out of control	Check if the mode were set as slave mode, lightness and color temperature of the products cannot be controlled in slave mode.	Press the "mode" button for once, switch the mode from slave mode to master mode.

Name	Quantity			N
	Single lamp set	Double lamp set	Three lamp set	Notes
Photography light	1	2	3	
Power cable	1	2	3	
Adapter	1	2	3	
Diffuser	1	2	3	
Carrying case	1	1	1	
User manual	1	1	1	
Barn doors		2	3	
Light stand		2	3	