

◄ 120.00 mm →

GREAT VIDEO MAKER



GVM Official website Facebook

Fmail: bh@gvmled.com il: support@gvmled.com 's gvmledservice@hotmail.com





CONTENTS

Product introduction	Page 1	
Disclaimers	Page 2	
Precautions	Page 2	
Product parameter	Page 3	
Product structure analysis	Page 4	
Installation method	Page 5,6,7	
Installation of folding and external mulberry plate		
	Page 8,9	
Description of product control keys	Page 10	
Function introduction and instruction for use Page 11~12		
Use and preservation	Page 12	
Simple faults and troubleshooting	Page 13	
Packing list	Page 14	

of the product are: vivid shooting effect desired results.

Welcome to "GVM-520S / GVM-672S". This product is specially desi senior photography enthusiasts. The product is suitable for live / outdoor studio photography, and also for youtube video shooting. The main features

- Two-color temperature characteristic with stepless adjustment, color range 2300K ~ 6800k, with hundreds of closely arranged LED bulbs, helps to restore and enrich the color of objects, providing you with natural and
- @ LCD screen display and stable system, which can support 360° rotation and effectively control the light Line. You can also install folding an external soft light board to avoid redundant light and make the light softe You can customize the control of fill light, so that you can easily shoot th
- We believe that once using our product correctly, you can make huge progres when shooting. Before using the product, you are strongly recommended read the instructions below carefully.

- 1. Before using this product, please read the instructions carefully and make sure use the product correctly. If you don't obey the instructions and warnings, you maybe cause harm to yourself and the people around, or even damage the product and other things around
- 2. Once you use this product, you are deemed to have read the disclaimer and warning carefully, understand and acknowledge all the terms and contents of this statement, and promise to take full responsibility for the use of this product and possible

- se use the matching power adapter or lithium battery with the s specification to power the product. Do not use power adapter with different output voltage parameters.
- The product is not waterproof, please use it in rainproof environmen \Im The product is not anti-corrosion, therefore do not let the product to
- any corrosive liquid.
- When using the product, make sure the product is put firmly and preven from falling and damage.
- If the product will not be used for a long time, please switch off the po to reduce energy loss.

- Brand : GVM
- Name : Photography light
- Type : Photography fill ligh
- Number: GVM-896S
- Number of light beads : 896
- ♦ Color-rendering Index : ≥97
- Color Temperature : 2300K~6800K
- Luminance: 24500lux/0.5m, 5400lux/1m
- Light Adjustment Method : Stepless adjustment
- lacksquare Light angle of lamp bead : 25 $^\circ$
- Function / Characteristics : High color rendering index light bead Joint control
- Power: 50W
- Power Supply Mode : DC input & Battery
- Voltage : AC:100-240V
- Power specification : DC15V/4A
- Battery Capacity: 7.4V-4400mAh*2 (to be purchased separately
- Weight: 1.9KG
- Size (mm): 310x320x55
- Material : Aluminum alloy
- Heat Dissipation : Natural way
- 🔷 Origin : Huizhou, China

STRUCTURE





1 The lamp can be installed and fixed on the bracket by rotating the knob clockwise, and unloaded by rotating in the counterclockwise direction.





FUNCTION INSTRUCTION INSTRUCTION FOR USE

Node selection :

Slight press the mode button to shift mode, the mode includes: Master, Slave.

MODE Master: Brightness, color temperature, and channel can be adjusted, and the brightness and color temperature of the same chann slave can also be adjusted simultaneously; brightness, color temperature.

MODE Slave : It can only adjust aisle; master mode and slave mode can only be synchronously controlled by master mode under the condition that they are under the same aisle.

2 Adjust CH: range 0~11

Set channel value using channel addition and subtraction key.

3 Adjust brightness (BRG): range 10%~100% In the master mode, adjust lightness through the knob

Adjust color temperature (CCT): range 2300K~6800K In the master mode, adjust color temperature through the knot

5 Custom shortcuts :

1, 2, 3, 4 four custom shortcuts can store four brightness and color temperature data. In Rotate mode, adjust the brightness and co temperature to the parameters you need to store, then press and hold it One custom shortcut in 3 seconds, "Collectde!" appears at the bottom of the screen to storesuccess. When the same button stores a new

11

parameter, the parameter stored last time of this button is automatica deleted.

⑥ On-line control (between photography lights)

Prepare two or more photography lights, set on as master mode and the other slave mode, and set a same channel value, in this way, it is able to control the lightness and color temperature of slave machine through adjusting the knob of the master machine. Moreover, it is also able to connect the master

Do not put the product in a highly humid, strong electromagnetic field, direct sunlight, high-temperature environment. If not use the product for a long time, disconnect the power and take out the battery.

Clean : Before clean, disconnect the power plug. And use wet cloth rather than any detergent or soluble liquid, avoiding damaging the surface layer.

Power : Make sure the power is in the demanded range, not too high or too low. Correctly load the battery, in order not the damage to machine.

Repairing : If there is fault or performance degradation, do not unpack the shell by yourself, avoiding damage the machine and lose the right of maintenance. When there s a fault, do not hesitate to contact us, and we will do our best to deal with the probl

ccessories : Please use the accessories provided by manufacturer and approved ones, in order to maximize the performance.

Guarantee : Do does not modify the product, or you will lose the right of maintenance.

SIMPIE FAULTS AND TROUBLESHOOTI

Phenomenon	Check the product	Troubleshooting
The switch indicator does not light up	① Check the matching power adapter indicator light up or not.	Make sure the adapter is well contacted with the power plug.
	② When using lithium battery, make sure there's no "low power" protection.	Charge the battery before using it.
The knob of lightness and color temperature are out of control	Check if the mode were set as slave mode, lightness and color temperature of the products cannot be controlled in slave mode.	Press the "mode" button for once, switch the mode from slave mode to master mode.

Name	Quantity	Notes	
Main Machine	1		
Power Cord	1		
Adapter	1		
Softboard	1		
Carrying Case	1		
User Manual	1		
14			