

**GVM**<sup>®</sup>  
Great Video Maker

**TQ-S**

# CONTENTS

Product Introduction .....	Page 1
Disclaimers .....	Page 2
Product Details .....	Page 2
Product Structure Analysis .....	Page 3
Installation Method .....	Page 4~7
Function Introduction And Instruction For Use .....	Page 8
APP Playback Settings .....	Page 9~10
Precautions .....	Page 10
Packing List .....	Page 11
Use And Preservation .....	Page 11
Product Warranty .....	Page 12~13

# PRODUCT INTRODUCTION

Welcome to use "TQ-S". This product is specially created for senior photography enthusiasts. The product can solve the problem of forgetting words and wrong words in live broadcast/studio photography/YouTube video shooting, making broadcasting more relaxed and natural.

The main features of the product are:

1. The base and bracket made of aluminum alloy make the equipment both light and strong.
2. The whole set of equipment adopts a simple and user-friendly hand-twisted screw structure, which is quick to install and has a multi-position installation method. The distance between the camera/tablet clip/mobile phone clip and the mirror screen and the camera height can be adjusted as needed. The operation is simple and the control is convenient.
3. Compatible with the installation of various photographic equipment such as SLR/digital.
4. The mirror plane adopts a colorless beamsplitter, a multi-layer dielectric coating (hard film) on the surface, no light loss, suitable for the various high-definition lens, wide-angle design, prompter document display is clear, no reflection, and no flaws will be exposed during shooting.

We firmly believe that the correct use of this product will be of great help to your shooting work. It is strongly recommended that you carefully read the following user guide before using the product.


# DISCLAIMERS

1. Before using this product, please read the text carefully to ensure that the correct operation of the product has been carried out. Failure to follow and not following the instructions and warnings in this document may cause harm to you and others around you, or even damage the product or other surrounding items.
2. By using this product, you are deemed to have carefully read the disclaimer and warning, understand and acknowledge all the terms and contents of this statement, and promise to take full responsibility for the use of this product and the possible consequences.
3. Design and specifications are subject to change without notice.


# PRODUCT DETAILS

- ◆ Brand : GVM
- ◆ Product Name : Teleprompter
- ◆ Product Model : TQ-S
- ◆ Product Type : Photography accessories
- ◆ Product Weight : 0.75KG
- ◆ Product Load : 2KG
- ◆ Product Size(mm) : 217×187×112
- ◆ Product Material : Plastic
- ◆ Functions And Features :
  - ① Compatible with mobile phones and tablets.(within 10.5 inches).
  - ② Lightweight and easy to assemble and simple to operate.
  - ③ A variety of photography equipment including mirrorless cameras, SLR cameras, and camcorders can be used.
- ◆ Commodity Origin : China. Huizhou

# PRODUCT STRUCTURE ANALYSIS

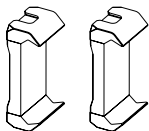


Clip for Tablet & Phone

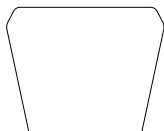


Dust cover




Thumb screw 1/4 Screw

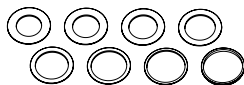


Adapter ring  
(52/55/58/62/67/72/77/82mm)

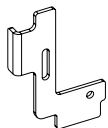

Phone clip support

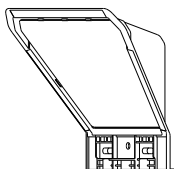


Teleprompter

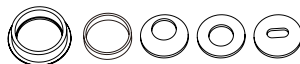

Foam ring


## Before assembly

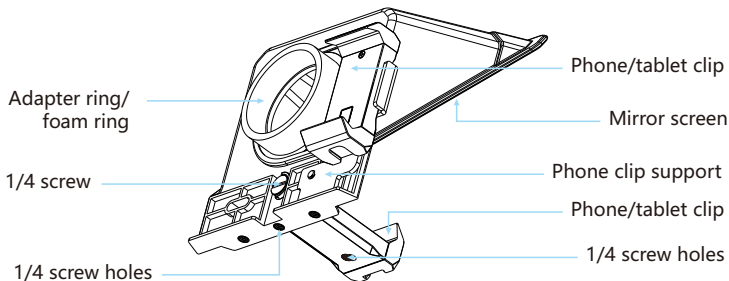


## After assembly

# INSTALLATION METHOD

- 1 As shown in the figure below, install the 'mobile phone/tablet clip' on the teleprompter and tighten the screws.

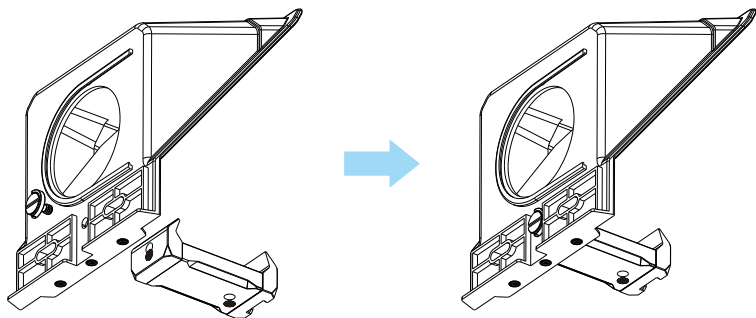


- 2 As shown in the figure below, install the 'phone/tablet' on the teleprompter.

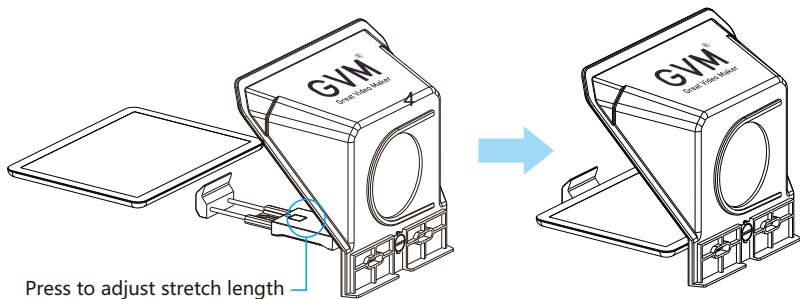


**3** There are three usage ways for this teleprompter.

Option 1


Vertical recording with mobile phone, the installation method is as follows.

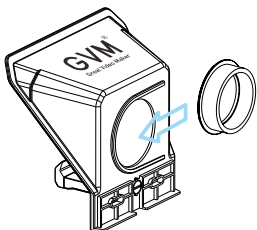


Move the "big foam ring" from right to left, install to the back of the teleprompter, As shown in the figure

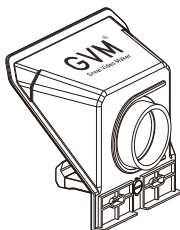


The 'foam ring' is installed as shown in the figure.

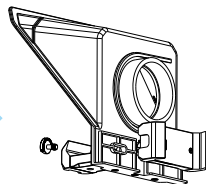


Install the "mobile phone/ tablet clip" to the back of the teleprompter as shown in the figure.

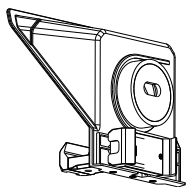


The 'small foam ring' is installed as shown in the figure.

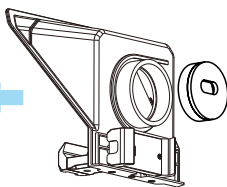

Install the 'small foam ring' on the back of the teleprompter as shown in the figure.

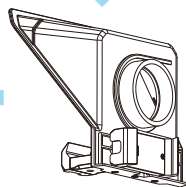


The 'mobile phone/tablet clip' is installed as shown in the figure.

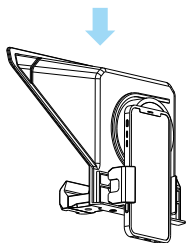


Mount the phone to the 'phone/ tablet' clip on the back of the teleprompter.

## Option 2


Horizontal recording with mobile phone, the installation method is as shown in the figure below.

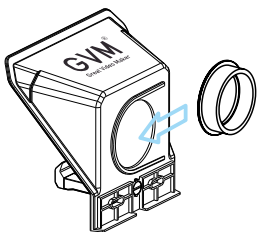


Move the "big foam ring" from right to left, install to the back of the teleprompter, As shown in the figure

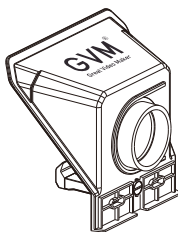


The 'foam ring' is installed as shown in the figure.

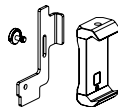


Install the 'mobile phone/tablet clip' on the 'Phone clip support' as shown in the figure.

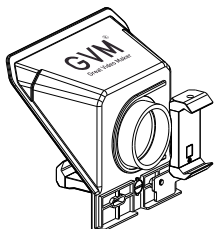


The installation is as shown in the figure.

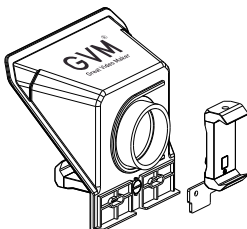


Install the 'phone clip support' to the back of the teleprompter.

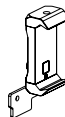


The installation is as shown in the figure.

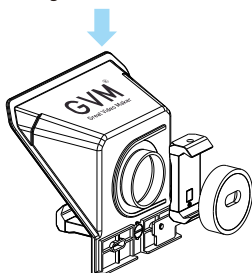

Install the 'small foam ring' on the back of the teleprompter as shown in the figure.

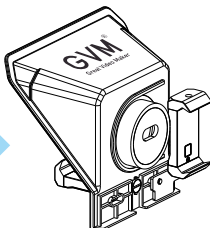

The 'small foam ring' is installed as shown in the figure.

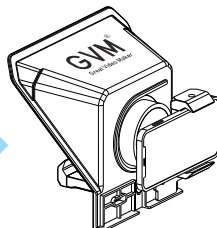


Mount the phone to the 'phone/tablet' clip on the back of the teleprompter.




### Option 3


SLR Camera/Micro SLR recording, the installation method is as shown in the figure below.

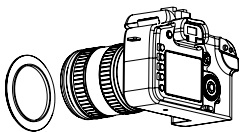


Choose the adapter ring according to the camera you are using.

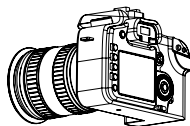

Install the "adapter ring" to the camera


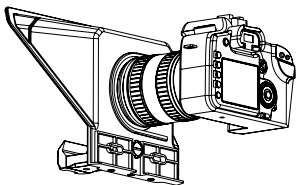


When the installation is complete, as shown in the figure.

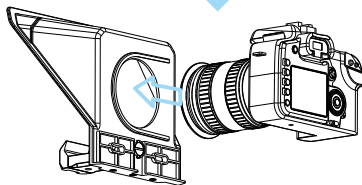

Move the "adapter ring" from right to left, install to the back of the teleprompter, As shown in the figure


- 4** There are three screw holes at the bottom of the teleprompter, which can be installed on a tripod.

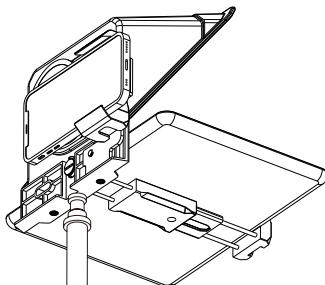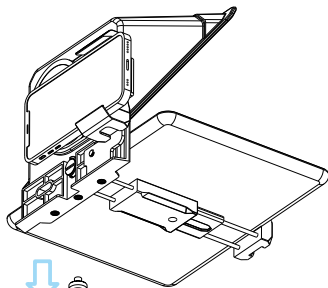

# FUNCTION INSTRUCTION & INSTRUCTION FOR USE


## ① The content displayed by the reflective tablet/mobile phone :

The mirror screen can reflect the content displayed on the tablet/mobile phone below when the camera is shooting, Make the person being photographed look directly at the lens and see the content of the tablet/mobile phone on the mirrored screen. The person being photographed has a good prompting effect without affecting the shooting.

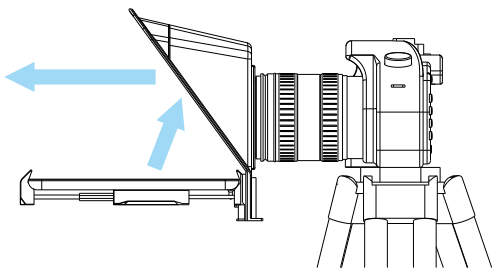

## ② Compatible with various photographic equipment :


Equipped with a variety of 'adapter rings' and 'foam rings', which can be installed with SLRs, cameras, digital Cameras, DV machines and various mobile phones. There is also a dual-use 'mobile phone/tablet holder' that can be installed on both a mobile phone and a tablet.

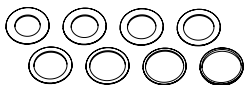

Adapter ring  
(52/55/58/62/67/72/77/82mm)



Foam ring

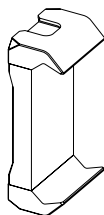


Tablet clip/phone clip

# APP PLAYBACK SETTINGS


Scan the QR code on the back of the manual to download the APP

Open the "GVM Teleprompter" software on your mobile phone → enter the APP, you can use. The APP sets the content, font size, playback speed, background color and whether to mirror the prompt.


APP main interface

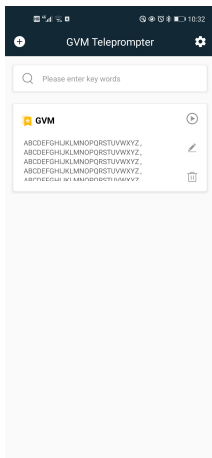

Setting interface

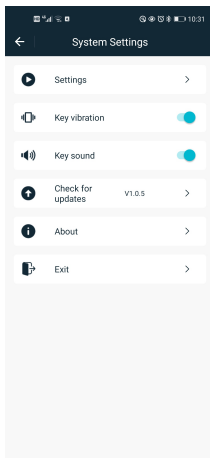

Playback settings Interface

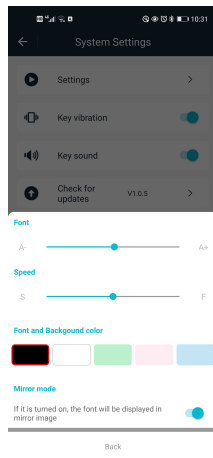






- ① On the main interface of the APP, click " + " in the upper left corner to create a play file, you can choose "Add directly" is written on the APP, and can also import existing txt or Word files on the phone. The play file is created → a new play file appears on the main interface of the APP.

② On the main interface of the APP, click on the right side of the file to be set:

" " Delete Files;

" " Modify the content of the file;

" " To enter the play interface → click " " on the play interface to start/pause the text; Click " " in the lower right corner to set the font size, playback speed, and background when playing text. Color and whether it is mirrored; click on the " " in the lower left corner to return to the main interface of the APP.

③ On the main interface of the APP, click " " in the upper right corner to enter the setting interface → click on the play setting to enter the playback setting interface. Here you can also set the font size and broadcast, Play speed, background color and whether to mirror.

## USE AND PRESERVATION

Do not store the machine in a highly humid, direct sunlight environment.

**Cleaning:** Please use a damp cloth for cleaning. Do not use any detergent or soluble liquid, otherwise, it will damage the surface processing layer.

**Maintenance:** If the machine is faulty or the performance is degraded, please do not repair it by yourself, so as not to damage the machine and lose the right of warranty. In case of machine failure, please contact us in time, we will do our best to do our best for you.

**Accessories:** Please use the accessories provided by manufacturer and approved ones, in order to maximize the performance.

**Guarantee:** Do does not modify the product, or you will lose the right of maintenance.

# PACKING LIST

Name	Quantity	Notes
Teleprompter	1	
Clip for Tablet & Phone	2	
Adapter Ring	8	
Foam Ring	5	
Thumb Screw 1/4 Screw	3	
Phone Clip Support	1	
Dust Cover	1	

## PRECAUTIONS

1. The product is not waterproof, please use it in rainproof environment.
2. The product is not anti-corrosion, therefore do not let the product touch any corrosive liquid.
3. When using the product, make sure the product is put firmly and prevent from falling and damage.

# PRODUCT WARRANTY

Dear user, this warranty card is important proof for applying for warranty service. Please cooperate with the salesperson to fill it out and keep it properly. Thank you!

Product Information	Model Number	Product Barcode
User Information	Name	Contact Number
	Mailing Address	
Seller Information	Name	
	Contact Number	
	Mailing Address	
	Sales Date	
Remarks		

Note: this form should be confirmed by the salesperson's stamp.

## Applicable Products

This document applies to the products listed in the relevant "Product Warranty Information" (see instructions below). Other products or components that do not fall within this scope (such as promotional products, gift items, and other components added after the factory) are not covered by this warranty promise.

## Warranty Period

The corresponding warranty period for products and components shall be executed according to the relevant "Product Warranty Information". The warranty period starts from the first day of purchase of the product, and the date of registration on the warranty card at the time of purchase shall prevail.

## How to Obtain Warranty Service

You can directly contact the product salesperson or authorized service agency, or call GVM's after-sales service hotline to contact us and have our service personnel arrange service for you. When applying for warranty service, you should provide a valid warranty card as a warranty certificate to be eligible for warranty service. If you cannot provide a valid warranty card, we may also provide you with warranty service under the circumstance that our products or components are confirmed to be within the warranty scope, but this is not our obligation.

## Cases where warranty does not apply:

If the product meets the following conditions, the warranty and service under this document will not apply:

1. The product or parts have exceeded the corresponding warranty period.
2. Malfunctions or damages caused by incorrect or improper use, maintenance, or storage, such as improper handling, use for purposes other than the reasonable expectations of the product, incorrect insertion or removal of external devices, falling or crushing due to external force, or exposure to inappropriate temperature, solvents, acids, alkalis, water immersion, or damp environments.
3. Malfunctions or damages caused by unauthorized installation, repair, modification, addition, or disassembly by institutions or personnel not authorized by GVM.
4. Modifications, changes, or removals of the original identification information of the product or its parts.
5. Lack of valid warranty card.
6. Malfunctions or damages caused by the use of unauthorized, non-standard or non-publicly released software.
7. Malfunctions or damages caused by force majeure or accidents;
8. Other malfunctions or damages not caused by quality issues of the product itself. In such cases, you should seek solutions from the relevant responsible parties, and GVM will not be held liable. Malfunctions or damages caused by components, accessories, or software not covered by the warranty or beyond the warranty scope that renders the product unable to function properly are not covered by the warranty. Fading, wear, and consumption that is normal during the product usage process are not covered by the warranty.

## Product Warranty and Service Support Information

The product warranty period and service types are implemented according to the following "Product Warranty Information" for each product category, component, and optional equipment:

Product Category	Optional	Maintenance Period(Month)	Warranty Service Type
Component	The Teleprompter (Except Mirror screen)	12 Month	Customer service repair
Other	Mirror screen	None	No Warranty

QC  
PASS



**GVM Official  
website**



**Facebook**



**Download APP**

**Huizhou City Latu Photographic Equipment Co., Ltd.**

Web: [www.gvmled.com](http://www.gvmled.com)

B&H Email: [bh@gvmled.com](mailto:bh@gvmled.com)

GVM Email: [support@gvmled.com](mailto:support@gvmled.com)

Amazon Email: [amazonsupport@gvmled.com](mailto:amazonsupport@gvmled.com)

Warehouse Add: 4301 N Delaware Ave, unit D. PHILADELPHIA, PA19137, USA