



## **CONTENTS**

Important Safety Instructions	Page 1~2
Warning	Page 2
Product Introduction	Page 3
Disclaimers	Page 3
Product Parameter	Page 4
Product Structure Diagram	Page 5
Installation Method	Page 6~8
Description Of Product Control Keys	Page 9
Function Introduction & Instructions For Use	Page 10~12
App Control	Page 13~14
Quick Troubleshooting	Page 15
Use And Preservation	Page 16
Precautions	Page 16
Packing List	Page 17
Product Warranty	Page 18~19

## IMPORTANT SAFETY INSTRUCTIONS

This product is professional lighting and staging equipment and should only be operated by a qualified lighting technician or used under the supervision of a professional. Always follow the precautions below to ensure safe and proper usage.

- 1. Read the product manual carefully before use.
- 2. This product is only suitable to use in a temperature range of -20°C to 45°C.
- 3. Do not place the equipment near flammable and volatile solvents such as alcohol and gasoline.
- 4. Before storing the device, make sure it has cooled down completely. When being stored, unplug the power cord from the device. The equipment should be stored in its carrying case or a well-ventilated and dry place.
- 5. This lighting fixture is not for general illumination and should not be used as such. Individuals with eye injuries or sensitivity should avoid using this lighting fixture.
- 6. This is a professional light and children are prohibited from using it. Parents or guardians must closely supervise children when they are near the equipment to prevent personal injury caused by colliding with or misusing the equipment.
- 7. Before using the equipment, please remove the protective cover.
- 8. When the lighting fixture is on, it is forbidden to stare directly at the light source under any circumstances. High-intensity lighting should only be used under the guidance of a professional lighting technician. Avoid staying in a high-intensity light environment for a long time. If feeling any discomfort, please immediately turn off the lighting fixture, and seek medical attention.
- 9. When the lighting fixture is on, use it carefully and avoid contacting high-temperature components such as LED light sources to prevent being burnt.
- 10.Do not use damaged equipment or accessories. Wait for a professional repairman to inspect and repair it before it is confirmed that the equipment can function normally.
- 11.If the light source is damaged or deformed due to heat, please stop using it and contact the manufacturer, service agents, or qualified repairman promptly to replace the light source to avoid accidents.
- 12. If the product is cracked due to falling, squeezing, or strong impact during use, please stop use it to avoid being electrically shocked by touching internal electronic components.
- 13.Do not disassemble the product by yourself. If the product malfunctions, it must be checked and repaired by the manufacturer or authorized repair personnel.
- 14.Before cleaning and maintenance, be sure to unplug the power supply. To unplug never pull on the cable but always pull the plug itself. This device shall only operate with earthed power outlets or emergency power generators.
- 15. When cleaning the device, do not wipe it with a wet cloth. Use a dry and soft cloth to wipe off the dirt
- 16.If an extension cord is required, it needs to have the necessary capacity to power the respective unit. Using an extension cord with a lower current capacity than the devices need may cause overheating.

- 17.For some products with long power cords, please place the power cords properly and avoid contact with overheated surfaces that may damage or trip personnel. Please use the original power cords of our manufactory. The damage caused by using non-original power cords is not covered by our repair service.
- 18.Do not use product accessories that are not recommended by our brand to avoid fire, electric shock, or personal injury.
- 19.Some products use batteries for power supply. Do not use any batteries, power sources, or accessories that are not specified in the user manual. Please keep batteries and other accessories out of reach of children and infants. If a child or infant swallows a battery or accessory, seek medical attention immediately. If the battery leaks, changes color, deforms, smokes, or emits an odor, remove it immediately. Be careful not to get burned during the removal. Continued use of such batteries may cause a fire, electric shock, or skin burns. Do not use any deformed or modified batteries. Do not disassemble or modify this product or the battery. Do not heat the battery or solder it. Do not let the battery come into contact with fire or water, or subject it to strong external force. Do not insert the battery's positive and negative ends incorrectly, or mix and use old and new batteries or different types of batteries.
- 20.For some products with built-in lithium batteries, please use a dedicated charger for charging, and following the correct operating instructions within the prescribed voltage and temperature range.
- 21.The warranty last for one year. Consumables like batteries, adapters, power cords, and other accessories are not covered by the warranty.
- 22. The one-year warranty will be invalidated if the equipment is found to have been repaired privately. The related repair costs will be charged.
- 23.Equipment malfunctions caused by non-standard operations are not covered by the warranty.
- 24.The safety instructions are based on our factory's strict testing. If there are any changes in the equipment's design and specifications, we reserve the right not to notify you. Customers can visit our official website to check the latest digital version of the instructions and learn about the newest product information.

### **Keep these instructions!**



- High-power LED lights are strictly prohibited from being directly viewed or shining into other people's eyes.
- Do not unplug the power cord or connecting wires while the light is on to avoid personal injury.
- ⚠ Do not cover the heat dissipation port when the lamp is in operation.
- ⚠ Keep children away from touching or using this light.
- As professional lighting equipment, please make sure to operate it correctly according to the user manual

## PRODUCT INTRODUCTION

Thank you for purchasing our "GVM-PRO-SD200B/GVM-PRO-SD300B", this product is designed for senior photography enthusiasts, The product is suitable for live broadcast / outdoor / film shooting / studio photography, It can also be used for YouTube video shooting.

- 1. It has high-definition COB beads, which help to restore and enrich the color of objects, providing you with natural and vivid shooting effects.
- 2. APP control, lights can be controlled through your iOS and Android smart mobile device connection; support Bluetooth Mesh networking, you can group control with GVM brand devices that support Mesh networking.
- 3. With standard DMX interface, DMX control mode of low precision 8bit and high precision 16bit can be realized.
- 4. 3 lighting modes, CCT mode, light source matching mode, light effect mode. CCT mode: white light mode, can adjust the light intensity and color temperature. Light source matching mode: this mode provides 12 different styles of light source types to choose from, when you need a specific light source, can save a lot of adjustment time.

Light Effect Mode: This mode provides 12 light effects: Lightning, CCT Loop, Candle, Bad Bulb, TV, Paparazzi, Explosion, Pulsing, Strobe, Fire, Fireworks, Welding.

We firmly believe that the correct use of this product would be of great help for your shooting work. Before using the product, we strongly recommend that you read the following user guide carefully.

## **DISCLAIMERS**

- Before using this product, please read the text carefully to ensure that the correct operation of the product to be carried out. Fail to follow or not following the instructions and warnings in this document may damage the product or other surrounding items, or even cause harm to you and others around you.
- 2. While using this product, you are deemed to have carefully read the disclaimer and warning, understand and agree all the terms and contents of this statement, and promise to take full responsibility for the use of this product and the possible consequences.
- 3. Design and specifications are subject to change without notice.

## PRODUCT PARAMETER

#### Product Model: GVM-PRO-SD200B


- Brand: GVM
- ◆ Product Name : Photography Lights
- ◆ Product Type: Photography Fill Light
- ◆ Features : A Variety Of Light Effect Mode, High-Display Finger Light Beads
- Control Methods: APP Bluetooth Mesh Network Control, Wireless Remote Control, Light Body Manipulation And Control, DMX
- ◆ Bluetooth Controllable Distance: ≤50M
- ◆ RF Controllable Distance: ≤50M
- ◆ Color Rendering Index : ≥ 97
- ◆ Color Temperature: 2700K~6800K
- ◆ Illuminance: Bare Light 8550 Lux@1m;
- Plus Standard Cover 45400 Lux@1m
- Power : 200W
- Product Weight: 2.7kg
- ◆ Product Size (mm): 292×130×134
- Lamp Beads Quantity: 1 (COB Lamp Beads)
- Light Adjustment Method : Step-Less Adjustment
- ◆ Power Supply Mode : DC Power
- ◆ Power Supply: DC:32V/7A
- ◆ Voltage: AC100V~240V
- Product Material : Aluminum Alloy
- ◆ Cooling : Heat Sink + Fan
- ◆ Place Of Origin : China. Huizhou

#### Product Model: GVM-PRO-SD300B

- Brand: GVM
- Product Name : Photography Lights
- ◆ Product Type: Photography Fill Light
- ◆ Features : A Variety Of Light Effect Mode, High-Display Finger Light Beads
- Control Methods: APP Bluetooth Mesh Network Control, Wireless Remote Control, Light Body Manipulation And Control. DMX
- ◆ Bluetooth Controllable Distance: ≤50M
- RF Controllable Distance: <50M</li>
- ◆ Color Rendering Index : ≥ 97
- ◆ Color Temperature: 2700K~6800K
- ◆ Illuminance : Bare Light 13700 lux@1m;
- Plus Standard Cover 65700 lux@1m
- Power : 300W
- Product Weight: 2.7kg
- Product Size (mm): 292×130×134
- Lamp Beads Quantity: 1 (COB Lamp Beads)
- Light Adjustment Method : Step-Less Adjustment
- Power Supply Mode : DC Power
- ◆ Power Supply: DC:60V/5A
- ◆ Voltage : AC100V~240V
- Product Material: Aluminum Alloy
- ◆ Cooling : Heat Sink + Fan
- ◆ Place Of Origin: China. Huizhou


## PRODUCT STRUCTURE DIAGRAM



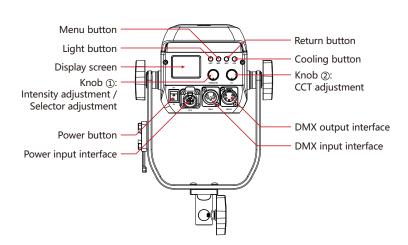

## INSTALLATION METHOD


① Loosen the light stand fixing knob, install the light to the light stand as shown below, then tighten the light stand fixing knob.

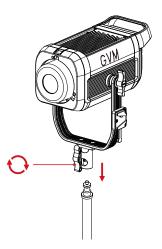


2 Loosen the angle locking handle, adjust the angle of the spotlight, then turn the angle locking handle tightly.




Insert the standard cover into the corresponding Bowens bayonet socket of the light, then turn it clockwise gently. To remove the cover on the light, pull it outward and rotate it counterclockwise.

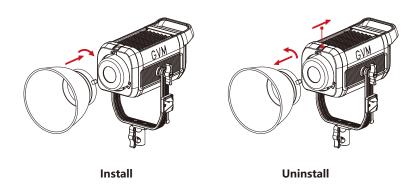


4 Attach the power adpoter onto the V-Mount Slot of the U-frame.

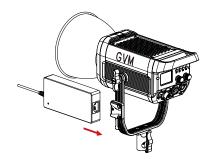


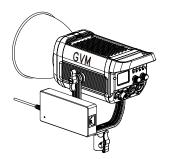

Connect the power cord to the power supply.

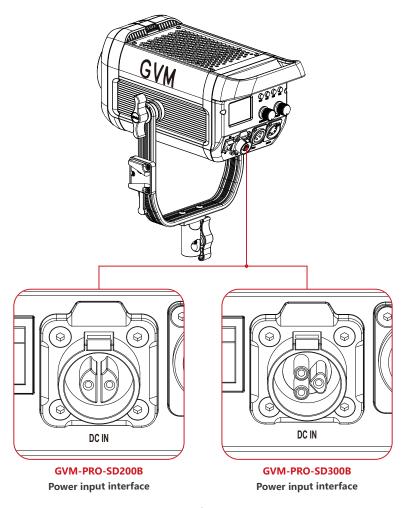

# DESCRIPTION OF PRODUCT CONTROL KEYS

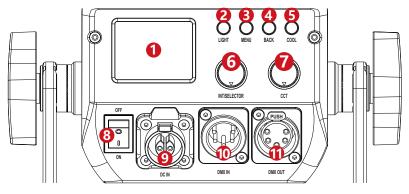

- 1 Display: Display current settings, modes and parameters.
- 2 Light key: Press this key to enter the CCT mode.
- 3 Menu key: Press this key to enter the settings menu page.
- Return key: Press this key to return to the previous level menu.
- Cooling key: Press COOL to enter "Full Speed mode", and press COOL again to exit "Full speed mode".
- 6 Knob 1: INT/SELECTOR multi-functional knob, by rotating it can be used to select a menu or adjust brightness level; by pressing it can be used to confirm the selection.
- Knob 2: Color temperature adjustment knob, by rotating it can be used to adjust Color temperature.
- 8 Power ON/OFF button.
- Power input interface: connect to power supply.
- DMX input interface: connected to the DMX controller.
- DMX output interface: connect to the DMX controller.

# FUNCTION INTRODUCTION & INSTRUCTIONS FOR USE

#### ① Status indication specification:

-	The current power supply	/	Dimming curve: Linear	*	Fan mode: Smart
	Currently battery powered	ر	Dimming curve: Exp	4	Fan mode: High
Ġ?	The device is disconnected	ackslash	Dimming curve: Log	<b>⊗</b>	Fan mode: Silent
*	Bluetooth connected	5	Dimming curve: S		Fan mode: Full speed
	DMX mode is enabled and the DMX console is connected			<b>(</b>	Remote control

#### ② CCT Mode:

Press [LIGHT] button to enter the CCT mode.In this mode you can adjust light intensity and color temperature.

INT: Current light intensity parameter, Rotate [Knob 1] to adjust the brightness.

CCT: Current light color temperature parameter, Rotate [Knob 2] to adjust the color temperature.



#### 3 Menu Page:

Press the [MENU] button to enter the menu setting page. Rotate [Knob 1] to select a sub menu. Press [Knob 1] to enter the corresponding menu page  $\rightarrow$  Press or rotate [Knob 1] to set parameters  $\rightarrow$  Press [BACK] key to return to the previous menu.

#### DMX SETTINGS:

DMX Address: Set the address parameters of the DMX.

DMX Mode: Select the DMX mode.









#### DIM CURVE:

Select the type of dimming curve [Linear/Log/Exp/S].



#### WL SETTINGS:

RF Settings: Set RF ON/OFF and channel parameters.

BT Settings: Set Bluetooth ON/OFF and Bluetooth reset.



#### FREQUENCY:

Set parameters for dimming frequency.



#### **FAN SETTINGS:**

Select the operating mode of the cooling fan between [Smart/High Speed/Silent].

Smart: Changes the fan speed as the temperature changes.

High speed: The fan runs at the maximum speed. You are advised to enable this mode when the ambient temperature is higher than 40°C.

Silent: The silent mode stops the fan from rotating and decreases the lights output power to as low as 60W. This mode is not recommended for prolonged use.



#### LANGUAGE:

Select the language [English/Chinese] displayed on the screen.



#### SYSTEM SETTINGS:

Products: View system firmware information.

Run Status: View the current running status of the product.

System Reset: Restore factory settings.



### 4 Full fan heat dissipation (COOL):

Press [COOL] to enter [Full Speed mode 2 ], and press [COOL] again to exit [Full speed mode 2].



## **⑤ Source Matching Mode & Effect Mode**

Source matching mode: This mode can only be accessed through the APP or the DMX controller. This mode provides 12 light sources: Tungsten, HMI5600, HMI6000, Studio Lamps, Sodium Lamp, Halogen, Arc Lamp, Candle, Sunset/Sunrise, Daylight, Overcast Sky, and CFL Cool White.



**Effect mode:** This mode can only be accessed through the APP or the DMX controller. This mode provides 12 light effects: Lightning, CCT Loop, Candle, Bad Bulb, TV, Paparazzi, Explosion, Pulsing, Strobe, Fire, Fireworks, and Welding.

## APP CONTROL

#### APP Download Method

(Scan the QR code on the back of the manual to download the APP)

Android Device: Official website QR code, Google Play, Huawei Store, etc.

iOS Device: App Store

#### **Device-adding**

- 1. Before adding a device, please make sure you have turned on your phone's Bluetooth and network data. accessibility to Bluetooth and network data, then reset the lighting device's Bluetooth.
- 2. Click the "Add Device" button on the "My Devices" page to find the Bluetooth light devices that have been turned on nearby. (Figure 1)
- 3. Select the device to be connected for pairing. (Figure 2)
- \* Android requires location permissions to be turned on in order to connect your device using mesh technology, and we do not collect any of your location information during this process.

### **Device Management**

- 1. After successfully adding your lighting device, your device will be displayed in the "My Devices" list. (Figure 3)
- 2. Click on the Device to access the device control. (Figure 4)













#### **Account Login**

- Use e-mail to get the verification code to log in (the first login automatically registers the account). (Figure 5)
- There may be a delay in sending the verification code, and the speed of delivery depends on the e-mail server you are using.
- Some email servers may recognize our verification emails as advertising promotions, please check your spam folder/inbox.
- After logging in, you can synchronize the Mesh Bluetooth devices bound to the current account to other smart devices.

Figure 5



## **USE AND PRESERVATION**

Do not place the product in a high humidity, strong electromagnetic field, direct sunlight, or high-temperature environment. If the product will not be used for a long time, please disconnect its power and remove the battery.

**Clean**: Before cleaning, disconnect the power plug. And use a damp cloth instead of any detergent or soluble liquids to avoid damaging the surface layer.

**Power:** Make sure the power is within the demanded range, not too high or too low. Correctly load the battery, in order not damage to the machine.

**Repairing:** If there is a fault or performance degradation, do not unpack the shell by yourself, avoiding damage to the machine and losing the right of maintenance. When there is a fault, do not hesitate to contact us, and we will do our best to deal with the problem.

**Accessories:** Please use the accessories provided by the manufacturer and approved ones, to maximize the performance.

Warranty: Do not modify the product, or you will lose the right to maintenance.

## **PRECAUTIONS**

- The product is not waterproof, it needs to be protected against wet conditions, condensation, dripping and splashing water, air humidity.
- 2. The product is not anti-corrosion, don't let the product come into contact with any corrosive liquid.
- 3. When the product is in use, ensure that the product is placed firmly to prevent it from falling and being damaged.
- When the product is not in use for a long time, please turn off the power of the product to save energy consumption.

## **QUICK TROUBLESHOOTING**

Phenomenon	Check the product	Troubleshooting
The switch indicator does not light up.	Whether the connection between the light and the power supply is normal.	Make sure the adapter is well connected with the power plug.
	When using a lithium battery to supply power, make sure that the battery does not have "low battery" protection.	Use the product after recharging the batteries.
After the APP enters to add a device, the Bluetooth of the device cannot be searched.	Check that the device is turned on properly and that it is not already bound by someone else connection.	Normal steps:  1. Turn on phone's Bluetooth and network data function, android need to turn on the GPS positioning.  2. Accessibility to Bluetooth and network data, GPS positioning.  3. Reset the device Bluetooth according to the operation manual.
The APP failed to make a device pairing connection.	Check if the device is turned on properly and has not been connected and bound by others, Check that the Bluetooth and network conditions of the cell phone are good.	Reset the device Bluetooth and restart the app and try to connect again.
The device is not searchable after removing it from the APP.	Whether or not to remove the device while it is offline or in poor network conditions	Reset the device Bluetooth and then search again to add the device.
In-app device clicks do not access controls.	Check if the device is online (small green dot displayed); If offline, check by following the Distribution Network Connection Failure steps.	Reboot the device, wait for 5 seconds, it shows as online status to control it; Reset the device Bluetooth and add the device back to the device list.

## **PACKING LIST**

Name	Quantity	Notes
Photography Light	1	
Snoot	1	
Power Cable	1	
AC Power	1	
Spotlight protective cover	1	
Magic cable tie	3	
Carrying Case	1	

## PRODUCT WARRANTY

Dear user, this warranty card is important proof for applying for warranty service. Please cooperate with the salesperson to fill it out and keep it properly. Thank you!

Product Information	Model Number	Product Barcode	
User	Name	Contact Number	
Information	Mailing Address		
	Name		
	Contact Number		
Seller Information	Mailing Address		
	Sales Date		
Remarks			

Note: this form should be confirmed by the salesperson's stamp.

#### **Applicable Products**

This document applies to the products listed in the relevant "Product Warranty Information" (see instructions below). Other products or components that do not fall within this scope (such as promotional products, gift items, and other components added after the factory) are not covered by this warranty promise.

#### **Warranty Period**

The corresponding warranty period for products and components shall be executed according to the relevant "Product Warranty Information". The warranty period starts from the first day of purchase of the product, and the date of registration on the warranty card at the time of purchase shall prevail.

#### **How to Obtain Warranty Service**

You can directly contact the product salesperson or authorized service agency, or call GVM's aftersales service hotline to contact us and have our service personnel arrange service for you. When applying for warranty service, you should provide a valid warranty card as a warranty certificate to be eligible for warranty service. If you cannot provide a valid warranty card, we may also provide you with warranty service under the circumstance that our products or components are confirmed to be within the warranty scope, but this is not our obligation.

#### Cases where warranty does not apply:

If the product meets the following conditions, the warranty and service under this document will not apply:

- 1. The product or parts have exceeded the corresponding warranty period.
- 2. Malfunctions or damages caused by incorrect or improper use, maintenance, or storage, such as improper handling, use for purposes other than the reasonable expectations of the product, incorrect insertion or removal of external devices, falling or crushing due to external force, or exposure to inappropriate temperature, solvents, acids, alkalis, water immersion, or damp environments.
- Malfunctions or damages caused by unauthorized installation, repair, modification, addition, or disassembly by institutions or personnel not authorized by GVM.
- 4. Modifications, changes, or removals of the original identification information of the product or its parts.
- 5. Lack of valid warranty card.
- Malfunctions or damages caused by the use of unauthorized, non-standard or non-publicly released software.
- 7. Malfunctions or damages caused by force majeure or accidents.
- 8. Other malfunctions or damages not caused by quality issues of the product itself. In such cases, you should seek solutions from the relevant responsible parties, and GVM will not be held liable. Malfunctions or damages caused by components, accessories, or software not covered by the warranty or beyond the warranty scope that renders the product unable to function properly are not covered by the warranty. Fading, wear, and consumption that is normal during the product usage process are not covered by the warranty.

## **Product Warranty and Service Support Information**

The product warranty period and service types are implemented according to the following "Product Warranty Information" for each product category, component, and optional equipment:

Product Category	Accessories Name	Warranty Period(Month)	Warranty Service Type
Component	Circuit Board.	12 Month	Customer service repair
Other	Spotlight mount, softbox, adapter, Standard reflector, power cord, battery Handle, light stand, TYPE-C cable, battery slot, battery, Fresnel lens, grid, carrying bag and all other accessories, etc.  Consumable or electrically sensitive parts are not covered by the warranty.	None	No Warranty





**GVM Official website** 



Facebook



**Download APP** 

Huizhou Latu Film Equipment Co., Ltd.

Web: www.gvmled.com B&H Email: bh@gvmled.com GVM Email: support@gvmled.com

Amazon Email: amazonsupport@gvmled.com

Amazon Email. amazonsupport@gvmieu.com

Warehouse Address: 12285 MCNULTY RD, STE 105 PHILADELPHIA, Pennsylvania 19154, USA