

GVM

GVM-TQY

CONTENTS

Precautions -----	Page 1
Disclaimers -----	Page 1
Function Introducing -----	Page 2~3
Bluetooth Connection -----	Page 3
Product Warranty -----	Page 4~5


PRECAUTIONS

1. The product is not waterproof, please use it in a rain-proof environment.
2. The product is not anti-corrosion, do not let the product come into contact with any corrosive liquid.
3. When the product is in use, make sure that the product is placed firmly to prevent the product from falling and being damaged;

DISCLAIMERS

1. Before using this product, please read the text carefully to ensure that the correct operation of the product has been carried out. Failure to follow and not following the instructions and warnings in this document may cause harm to you and others around you, or even damage the product or other surrounding items.
2. By using this product, you are deemed to have carefully read the disclaimer and warning, understand and acknowledge all the terms and contents of this statement, and promise to take full responsibility for the use of this product and the possible consequences.
3. Design and specifications are subject to change without notice.

FUNCTION INTRODUCT

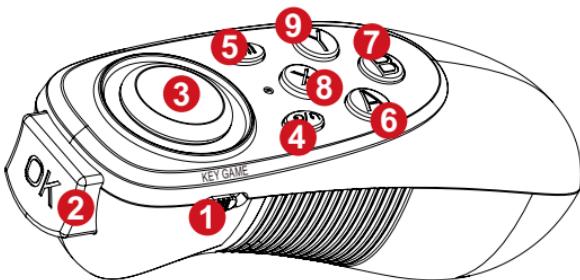

Introduction to iOS Bluetooth Remote Control Function

Serial Number	Name	Text function	pdf browsing function PDF
1	KEY/GAME	Bluetooth control mode selection, iOS use KEY mode.	Bluetooth control mode selection, iOS use KEY mode.
2	OK Key	No control event	No control event
3	Joystick (up down left right)	Up and right Give it a quick flick: accelerate Toggle and not let go: the font is enlarged; let go After, stop zooming in Down and left Give it a quick flick: slow down Toggle and not let go: the font is reduced; let go After, stop shrinking the font.	Up and right Give it a quick flick: Next page Toggle and not let go: Next page Down and left Give it a quick flick: Previous page Toggle and not let go: Previous page
4	No control event	Long press: turn on/off the remote control	Long press: turn on/off the remote control
5	Menu button	No control event	No control event
6	A Key	Long press: turn on/off the remote control	Next page
7	B Key	Return to the first line	Back to homepage
8	X Key	Mirroring	Mirroring
9	Y Key	No control event	No control event

Introduction to Android Bluetooth Remote Control Function

Serial Number	Name	Text function	pdf browsing function PDF
1	KEY/ GAME	Bluetooth control mode selection, iOS use KEY mode	Bluetooth control mode selection, iOS use KEY mode
2	OK Key	Pause / playback	Pause / playback
3	Joystick (up down left right)	Up: Swipe up the page Down: scroll down the page To the left: font size reduction To the right: font enlargement	Up: page up Down: page down To the left: page zoom out To the right: page zoom
4	No control event	Bluetooth switch key	Bluetooth switch key
5	Menu button	Show / close menu	Show / close menu
6	A Key	Slow down	Page zoom out
7	B Key	Return to the first line	Back to homepage
8	X Key	Pause / playback	Pause / playback
9	Y Key	Accelerate	Page zoom

BLUETOOTH CONNECTION

1. Install two 7 batteries on the remote control first.
2. After the device is powered on, the LED indicator will blink and enter the wireless pairing mode automaticallyAddress and name of standby: MOCUTE-052-XXX, click connect.
3. After the connection is complete, the LED indicator is off. The next boot will automatically connect to the last pair Wireless devices.
4. In the shutdown state, when the  power button is pressed for more than 8 seconds, the indicator will blink, If you enter the rematch mode, the device that was paired last time will not be automatically connected.

PRODUCT WARRANTY

Dear user, this warranty card is important proof for applying for warranty service. Please cooperate with the salesperson to fill it out and keep it properly. Thank you!

Product Information	Model Number	Product Barcode
User Information	Name	Contact Number
	Mailing Address	
Seller Information	Name	
	Contact Number	
	Mailing Address	
	Sales Date	
Remarks		

Note: this form should be confirmed by the salesperson's stamp.

Applicable Products

This document applies to the products listed in the relevant "Product Warranty Information" (see instructions below). Other products or components that do not fall within this scope (such as promotional products, gift items, and other components added after the factory) are not covered by this warranty promise.

Warranty Period

The corresponding warranty period for products and components shall be executed according to the relevant "Product Warranty Information". The warranty period starts from the first day of purchase of the product, and the date of registration on the warranty card at the time of purchase shall prevail.

How to Obtain Warranty Service

You can directly contact the product salesperson or authorized service agency, or call GVM's after-sales service hotline to contact us and have our service personnel arrange service for you. When applying for warranty service, you should provide a valid warranty card as a warranty certificate to be eligible for warranty service. If you cannot provide a valid warranty card, we may also provide you with warranty service under the circumstance that our products or components are confirmed to be within the warranty scope, but this is not our obligation.

Cases where warranty does not apply:

If the product meets the following conditions, the warranty and service under this document will not apply:

1. The product or parts have exceeded the corresponding warranty period.
2. Malfunctions or damages caused by incorrect or improper use, maintenance, or storage, such as improper handling, use for purposes other than the reasonable expectations of the product, incorrect insertion or removal of external devices, falling or crushing due to external force, or exposure to inappropriate temperature, solvents, acids, alkalis, water immersion, or damp environments.
3. Malfunctions or damages caused by unauthorized installation, repair, modification, addition, or disassembly by institutions or personnel not authorized by GVM.
4. Modifications, changes, or removals of the original identification information of the product or its parts.
5. Lack of valid warranty card.
6. Malfunctions or damages caused by the use of unauthorized, non-standard or non-publicly released software.
7. Malfunctions or damages caused by force majeure or accidents.
8. Other malfunctions or damages not caused by quality issues of the product itself. In such cases, you should seek solutions from the relevant responsible parties, and GVM will not be held liable. Malfunctions or damages caused by components, accessories, or software not covered by the warranty or beyond the warranty scope that renders the product unable to function properly are not covered by the warranty. Fading, wear, and consumption that is normal during the product usage process are not covered by the warranty.

Product Warranty and Service Support Information

The product warranty period and service types are implemented according to the following "Product Warranty Information" for each product category, component, and optional equipment:

Product Category	Accessories Name	Warranty Period(Month)	Warranty Service Type
Component	Circuit Board.	12 Month	Customer service repair



GVM Official website



Facebook



Download APP

Huizhou Latu Film Equipment Co., Ltd.

Web: www.gvmled.com

B&H Email: bh@gvmled.com

GVM Email: support@gvmled.com

Amazon Email: amazonsupport@gvmled.com

Warehouse Address: 12285 MCNULTY RD, STE 105 PHILADELPHIA, Pennsylvania 19154, USA