



→ 120.00 mm →



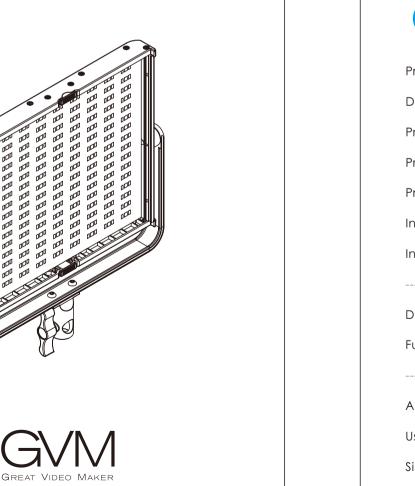

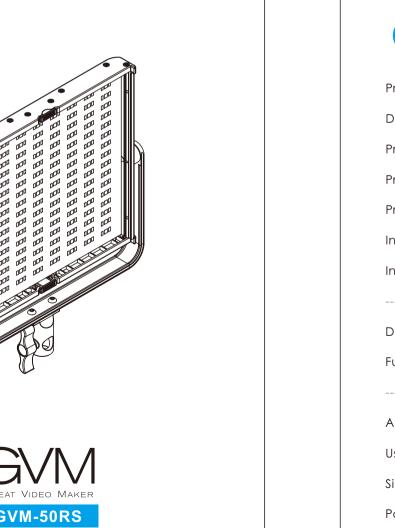

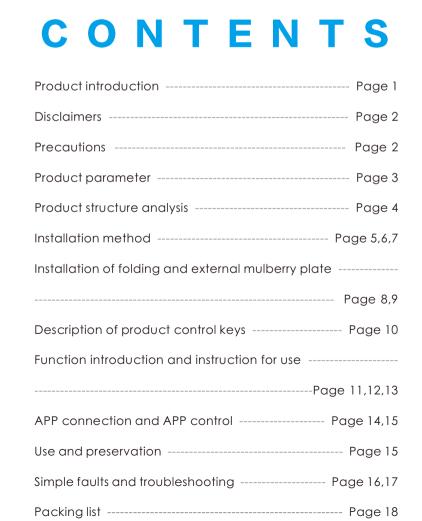

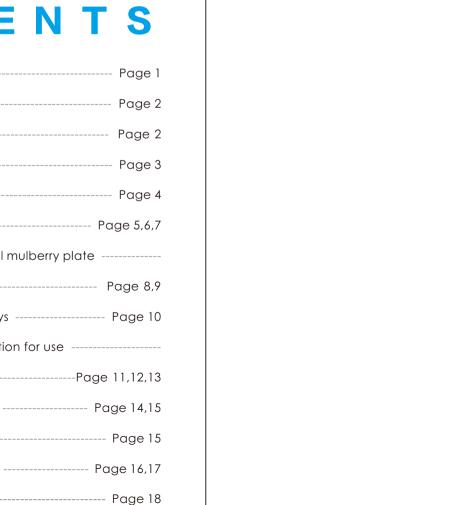

photography enthusiasts. The product is suitable for live / outdoor / stud \odot step-less adjustable RGB color and dual color temperature feature, color range 3200K ~ 5600k, with 384 LED bulbs, which is helpful to restore and enrich the color of objects and provide you with natural and vivid shoot mobile device.

You can customize the control of fill light, so that you can easily shoot the

If the product will not be used for a long time, please switch off the power to reduce energy loss.

Welcome to "GVM-50RS". This product is specially designed for se

Candlelight, TV, Bad light bulb, Party, Disco, Paparazzi.

We believe that once using our product correctly, you can make huge progres

when shooting. Before using the product, you are strongly recommended t

Origin : Huizhou, China

Function / Feature: RGB, APP, Joint control, Special light


- Size (mm): 310x320x55


- maybe cause harm to yourself and the people around, or even damage the
- carefully, understand and acknowledge all the terms and contents of this statement,
 - Color-rendering Index : ≥97

- ② App intelligent control system, which can be controlled by your intelligen
- and effectively control the light Line. You can also install folding and external soft light board to avoid redundant light and make the light soft
- ④ The product can simulate 8 kinds of scene lights: Lightning, Police car,
 - - Power specification : DC15V/4A
 - Battery Capacity: 7.4V-4400mAh*2 (to be purchased separately) When using the product, make sure the product is put firmly and prevent


- Color Temperature: 3200K---5600K ♦ HUE: RGB 0°~360°
- - Light angle of lamp bead: 120°

- Material: aluminum alloy
- Luminance: 6500lux/0.5m, 1600lux/1m
 Light adjustment method: Stepless adjustment
- High color rendering index light beads
 - Power Supply Mode : DC input & Battery

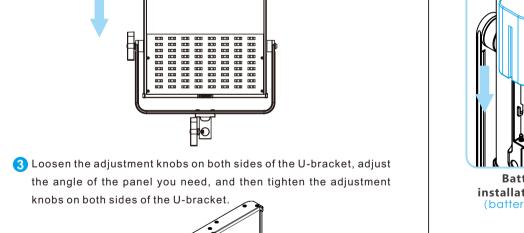

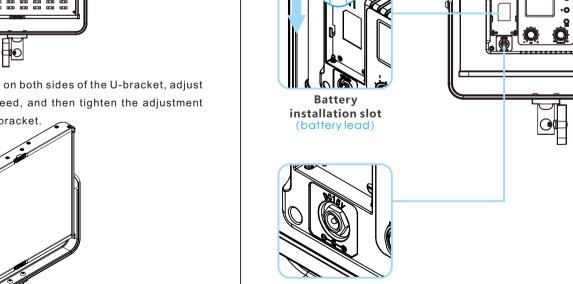

lamp, align the diffuser with the screw hole, and lock the diffuse

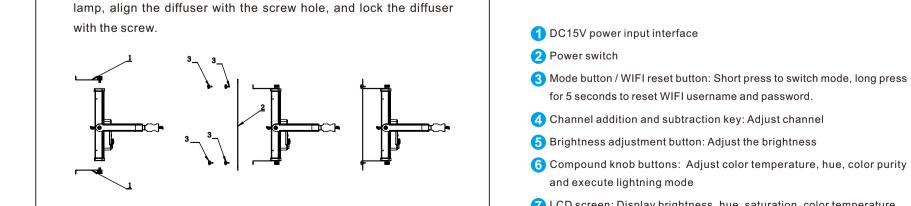

- time and other parameters can be changing the addition and subtraction keys and adjusted by rotating the knob. (Note: The lightning mode is

MODE:Master: Adjust brightness, color temperature, hue and color purity

- Adjust brightness (BRG): range 0%~100%

- CD screen: Display brightness, hue, saturation, color temperature, mode, channel value and other data

Rotate, Master, Slave, WIFI, Special Light.

compound knob button lightly, and then rotate the compound kr

- In master mode / rotate mode, you can switch to SAT by pressing the
- compound knob button lightly, and then rotate the compound knob button ecial Light: There are 8 kinds of scenes: Lightning, police car, Candle, V, Bad Bulb, Party, Disco, Paparazzi. The brightness, color temperature,

- In master mode / rotate mode, the brightness can be adjusted by rotating

The camera lamp switched to WIFI mode. The mobile phone connects the camera lamp via WIFI, and controls the brightness, color temperature, hue,

- mode, set the rest to the slave mode, and set the channel (CH) of the
- First, press the mode key to switch the photography lights to WIFI mode.

 Den the "GVM Easily" APP on your mobile phone (the phone needs WIFI fion at this time), register the APP account (as long as the email format is correct, of the master and the slave are the same, the brightness and color
- - - annel, ON / OFF, and other control keys on the APP to con-

Repairing: If there is fault or performance degradation, do not unpack the shellourself, avoiding damage the machine and lose the right of maintenance. When t is a fault, do not hesitate to contact us, and we will do our best to deal with the pro. Accessories: Please use the accessories provided by manufacturer and appro

ones, in order to maximize the performance. uarantee: Do does not modify the product, or you will lose the right of maintenance

① Check the matching power adapter indicator light up or not.

Make sure the adapter is well contacted with the power plug.

It is able to reset the WIFI username and password if long press the WIFI button for over 5 seconds. After resetting, the username and the passwor

the current channel value up and down.

face Switch devices in the menu --- Select the device type as "RGB liq and then set in the main menu of the APP interface, select "Switch WIFI"

set the rest to slave mode, and set the slave channel through the addition and subtraction button, so that when the WIFI mode machine is controlled through APP, the brightness and color temperature, hue, color purity, on/off of the slave of the same channel as the WIFI mode machine can be

"GVM_LED".It returns to the APP main interface, "Connected" is display

ng that the phone has successfully connected to the APF

orightness, hue, color purity, color temperature, channel value and ON / C

Main Machine

Diffuser 1

Carrying Case 1

User Manual 1